


- J MIN. SPACE WHEN MOUNTING DRIVE UNIT
- K LOWER EDGE TO BE CUT ACC. TO HULL FORM
- Q REF. POINT. SEE INSTALLATION HANDBOOK
- 1 LIFTING DEVICE
- 2  CENTRE OF GRAVITY
- 3 EXHAUST ELBOW FOR HOSE ID 44 (175)
- 4 AIR FILTER
- 5 OIL FILLING, ENGINE
- 6 OIL DIPSTICK, ENGINE
- 7 OIL FILTER, ENGINE
- 8 OIL DRAIN (WITH PUMP) ENGINE Ø10
- 9 OIL DIPSTICK / OIL FILL CAP, DRIVE
- 10 OIL DRAIN, DRIVE
- 11 WATER INLET, DRIVE
- 12 SEA WATER PUMP
- 13 WATER FILLER CAP FRESH WATER
- 14 HEAT WATER OUTLET
- 15 HEAT WATER INLET
- 16 FUEL CONNECTION FOR HOSE ID 913/8)
- 17 FUEL RETURN CONNECTION FOR HOSE ID 913/8)
- 18 FUEL FILTER
- 19 SPEED CONTROL LEVER
- 20 CONNECTING BOX FOR EXTENSION CABLE
- 21 BATTERY MINUS (-) CONNECTION
- 22 PLUS (+) CONNECTION FOR CHARGING DISTRIBUTOR
- 23 STARTER BATTERY PLUS (+) CONNECTION

DIMENSION IN MILLIMETRES AND INCHES WITHIN ()

SCALE 1:5